



## Kiln Instructions for Firing Clay

### \*Load Kiln

- A. Green ware can touch and overlap.
- B. Glazed ware must not touch other pieces or the shelves. Ensure proper stiling if needed.

1. Shut kiln lid and fasten latch.
2. Turn on vent switch.
3. Press **enter**.
4. Press **Cone fire** mode.
5. Press **04** (greenware) or **06** (glazed ware).
6. Press **enter**.
7. Press **medium** speed then **enter**.
8. Press **enter**.
9. Press **Start**.

\*If you have any problems, contact the VP of Art or the front office.



CHRISTA MCAULIFFE ELEMENTARY



McAuliffe Elementary

**PTSA**

*everychild. one voice.*

